

Display Interface Parameter Setting



① Home Screen



⑥ Battery Type



⑤ Load Operating Mode



Browser Interface

Short press on the menu key to cycle through the various sectors and parameters.

Setting Parameters

Under the interface 2-6 Press the menu key to modify the parameter settings at this time the number will blink, press the up and down keys to adjust the value, and then automatically return to the main interface of the voltage display after 3 seconds after completion.



② Float Charge Voltage



③ Discharge Recovery Voltage



④ Discharge Cutoff Voltage



Troubleshooting Guide

Anomalies	Possible Causes	Prescription
Sunny but not charging	PV panel open or reversed	Reconnect the photovoltaic panels
Load marking not illuminated	Mode setting error	Retrieve
	Battery voltage too low	Recharge
Load marking slow flash	Load overcurrent	Reducing load power
Load marking flash	Short circuit protection	Remove short circuit, automatic recovery
Controller does not light up	Battery voltage too low/reversed	Replace battery/check reverse connection